

LIMITED TRANSFERABLE WARRANTY

IMPORTANT: PLEASE READ THIS DOCUMENT COMPLETELY. IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR RIGHTS AND OBLIGATIONS, AS WELL AS LIMITATIONS AND EXCLUSIONS THAT MAY OR MAY NOT APPLY TO YOU. BY ACCEPTING DELIVERY OF THE PRODUCT(S), YOU AGREE TO BE BOUND BY AND ACCEPT THESE TERMS AND CONDITIONS.

Quilter Laboratories, LLC (Quilter Labs) guarantees its products to be free from defective material and/or workmanship and will replace defective parts and repair malfunctioning products under this warranty when the defect occurs under normal installation and use—provided the unit is returned to our factory via pre-paid transportation with a copy of proof of purchase. (i.e. sales receipt). This warranty provides that the examination of the return product must indicate, in our judgment, a manufacturing defect. This warranty does not extend to any product which has been subjected to misuse, neglect, accident, or where the date code or serial number has been defaced or removed. Quilter Labs shall not be liable for incidental and/or consequential damages. This warranty gives you specific legal rights.

This limited warranty is freely transferable during the term of the warranty period. The warranty on Quilter products is NOT VALID if the products have been purchased from an unauthorized dealer/online e-tailer, or if the factory serial number has been removed, defaced, or replaced in any way.

Customers may have additional rights, which vary from state to state or from country to country. In the event that a provision of this limited warranty is void, prohibited or superseded by local laws, the remaining provisions shall remain in effect. The Quilter Labs limited warranty in the United States is valid for a period of three (3) years from date of purchase except that foot controllers, covers, cabinets, handles, and cabinet hardware are warranted for a period of one (1) year and speakers, and all other included accessory products for a period of ninety (90) days from date of purchase.

IMPORTANT: PLEASE RETAIN YOUR SALES RECEIPT OR ONLINE ORDER RECORD, AS IT IS YOUR PROOF OF PURCHASE COVERING YOUR LIMITED WARRANTY. TO TRANSFER THE WARRANTY TO A SUBSEQUENT PURCHASER, YOU MUST ENDORSE THE SALE OF THE PRODUCT TO THE SUBSEQUENT PURCHASER ON THE FRONT OF THE SALES RECEIPT. THIS LIMITED WARRANTY IS VOID WITHOUT SUCH ENDORSED SALES RECEIPT.

Defective products that qualify for coverage under this warranty will be repaired or replaced, (at Quilter Labs' discretion) with a like or comparable product, without charge. To receive warranty service, return the complete product to Quilter Labs, LLC, with proof of purchase, during the applicable warranty period. The Quilter Labs Dealer from whom you purchased your product may also be authorized for warranty service and should be the first point of contact when service is required. TRANSPORTATION COSTS ARE NOT INCLUDED IN THIS LIMITED WARRANTY. Any repair or service performed by any person or entity other than an Authorized Quilter Labs Electronics Service Center is not covered by this limited warranty.


Other questions regarding this warranty can be answered by calling (714) 519-6114 or by contacting your authorized Quilter distributor. Email: info@quilterlabs.com

P/N 000123 Rev. A

Quilter™

MicroPro Deluxe Foot Controller

FC200-6

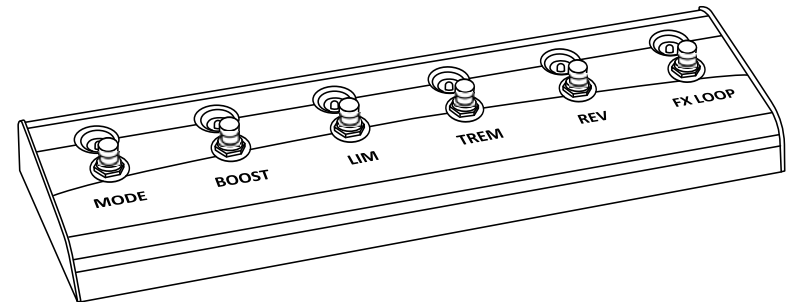

Owner's Manual

© 2011 Quilter Labs, LLC. All Rights Reserved


Quilter and the Quilter logo are trademarks of Quilter Laboratories, LLC

Contents:

1. Six-function foot controller
2. 15' connection cable
3. Owner's Manual

Using Your Foot Controller

FOOTSWITCH



USE MICROPRO
FOOTSWITCH ONLY

Plug one end of the supplied cable into either one of the jacks on the foot controller until you hear a "click". Plug the other end of the cable into the footswitch jack on the rear of a MicroPro Series amplifier. To remove the cable, press the plastic tab on the plug down to unlock it. Should you lose or damage the included cable, you can substitute a normally wired network cable with RJ-45 plugs.

(You can use one foot controller to switch two amplifiers at the same time by connecting each amplifier to a jack on the foot controller.)

With the foot controller attached, you now have switchable control over six of the amplifier's functions. For better orientation, the illuminated labels above footswitchable functions turn on and off along with the foot controller LEDs.

MODE Switch

When the footswitch is engaged (Blue LED on), the FULLQ setting is activated. When the switch is off (LED off), the active mode will revert to the setting indicated by the knob. If the knob is set to FULLQ, no change will occur.

BOOST Switch

When the footswitch is engaged (Red LED on), the gain boost is activated in accordance with the settings on the amp. If the Boost Voice Selector is set to OFF, the footswitch will not activate the boost function.

LIM Switch

When the footswitch is engaged (Amber LED on), the Overdrive Limiter is activated. The amount of limiting is set by the amplifier's LIM knob. If the LIM knob is at its minimum position (fully counter-clockwise), no limiting is applied.

TREM Switch

When the footswitch is engaged (Amber LED on), the Tremolo is activated. If the TREM knob is at its minimum position (fully counter-clockwise), the Tremolo will remain off.

REV Switch

When the footswitch is engaged (Green LED on,) the Reverb is activated. The amount of Reverb is set by the REV knob. If the REV knob is at its minimum position (fully counter-clockwise), Reverb will remain off.

FX LOOP Switch

When the footswitch is engaged (Amber LED on), the Effects Loop will be activated and the signal path will be switched from the internal path to the RETURN jack. If there is no plug inserted into the RETURN jack, the FX LOOP will remain bypassed (no change will be heard).

NOTE: All of the amplifier functions noted above are enabled without a foot controller connected. The foot controller allows each function to be bypassed as desired.

Troubleshooting

Symptom	Action
No lights	<ul style="list-style-type: none">• Ensure that both sides of the cable are fully inserted. The plugs should "click" into the jacks locking them in place.• If the switch does not activate the LED, you may have a faulty foot controller. Please seek service.
One or more switches do not active their functions	<ul style="list-style-type: none">• If the MODE or BOOST knobs are set to their default positions (FULLQ and OFF respectively), the footswitch cannot switch these functions.• If the LIM, TREM and REV knobs are set to their minimum setting, the footswitch will not activate these features.• If there is no plug inserted into the RETURN jack, the FX LOOP switch will not activate the Effects Loop.• BOOST, LIM and TREM are not available when in the VOL1 mode.

The MicroPro Deluxe Foot Controller is compatible only with Quilter MicroPro Series amplifiers. Do not use the foot controller with any other devices. There are no user-serviceable parts inside the foot controller. Attempts to repair the device yourself may result in voiding of the warranty.

If the device is exposed to a liquid spill or excessive moisture, unplug it immediately and allow to dry thoroughly before using.